
Viper Industrial Series






STYLE	NOZZLE PRES- SURE (psi)	NOZZLE FLOW (gpm)	STREAM SET- TING	EFFECTIVE REACH
	75	82	SS	108
	75	85	45° fog	36
	100	95	SS	118
ST-2510 (PV)	100	99	45° fog	39
	150	116	SS	128
		121	45° fog	39
ST-5016 (PV)	75	95	SS	115
		95	45° fog	36
	100	110	SS	125
		110	45° fog	39
	150	135	SS	131
		135	45° fog	43
	75	82	SS	89
VTE-2510/ BLACKNIGHT		87	45° fog	36
	100	95	SS	95
		100	45° fog	36
	150	116	SS	108
		123	45° fog	39

G

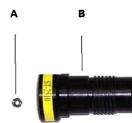

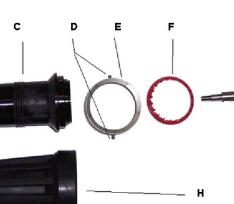

ST2510 AND ST5016 TIP BOM					
REFERENCE	PART NAME	PART #	QUANTITY		
Α	LOCK NUT	V-LCKNT-IND	1		
В	INNER BARREL	V-INNERBARREL-IND	1		
С	OUTER BARREL	V-OUTRBRRL-IND	1		
D	SET SCREW	V-SETPIN-RR-3012	2		
E	RETAINER RING	V-RTNRRNG-IND	1		
F	SPINNING TEETH	V-TEETH-3012	1		
G	SPINDLE SHAFT	V-SPNDLSHFT-IND	1		
G*	SPINDLE SHAFT	V-SPNDLSHFT-IND125	1		
н	BUMPER	V- BUMPER-IND	1		

NOTE: IF PLASTIC TIP FAILS IT NEEDS TO BE RE-



6342 East County Road 18, Johnstown, Colorado 80534 Ph: 970-663-4966 • Toll Free: 888-663-4966 • Fax: 970-663-3878 • www.CSSupplyInc.com

(VALVE PORTION) VB1560 and VB3012 BOM				
REFERENCE	PART NAME	PART #	QUANTITY	
1	1" GASKET	GASKET_1	1	
1a	1.5" GASKET	GASKET_15	1	
2	1" SWIVEL	V-1" SWIVEL	1	
2a	1.5" SWIVEL	V-1.5" SWIVEL	1	
3	SWIVEL O-RING	V-ORING-SW-3012	1	
4	BALL	V-BALL-3012	1	
5	PISTOL GRIP	V-PG15V	1	
6	BALL LOCATOR (2	V-BALLLOC-3012	1	
7	PIECES)			
8	PISTOL GRIP SET PIN	V-SETPIN-3012	1	
9	VALVE BODY	VLVBDY-3012	1	
10 11	SEAT RETAINER (3 PIECES)	V-SEATRTNR-3012	1	
12	(0111010)			
13	BALL ACUATOR (2	V-BALLACT-3012	1	
14	PEICES)			
15	PAN HEAD COVER	V-PANHEAD-3012	1	
16	SWIVEL SET PIN	V-SETPIN-3012	1	
17	BALL BEARINGS	V-BEARINGS-3012	32	
18	HANDLE (BAIL)	V-HANDLE-3012	1	

SG1560 AVAILABLE KITS				
KIT#	KIT Name	PARTS CONTAINED		
VNRK-1560	VIPER NOZZLE REPAIR KIT SG1560	A,D,E,F,G,H 1,3,4,5,6,7,8,10,11,12,13,14,15,16,17,18		
VVRK-3012	Valve Repair Kit Small	1,1a,3,4,6,7,10,11,12,13,14,15,16,17,18		
VBSC-3012	Ball & Seat Combo Small	4,10,11,12		
V-HH5-3012	Handle Hardware Small	6,7,13,14,15		
V-SWKIT1560	Swivel Kit 1" Small	1,3,16,17		
V-SWKIT3012	Swivel Kit 1.5" Small	1a,3,16,17		

A DANGER

PLEASE BE RESPONSIBLE! PLEASE BE CAREFUL!

THE USER OF THIS EQUIPMENT IS PERSONALLY RESPONSIBLE FOR THE FOLLOWING:

- 1. You need to know and understand that Firefighting and Emergency response is dangerous and proper training is needed.
- 2. You need to be physically fit and skillful in the use of any equipment that you may need to use.
- 3. You need to know that your equipment is in proper working order.
- 4. You need to know carelessness or negligence may result in injury or death.

PLEASE BE RESPONSIBLE! PLEASE BE CAREFUL!

BALL SHUTOFF USE:

- Open and close the valve slowly to reduce risk of water hammer.
- Pull the bail handle toward the swivel to OPEN the valve.
- Push the bail handle toward the tip of the nozzle to CLOSE the valve.

TIP USE:

- Rotate the rubber bumper on the end to select spray pattern.
- Twist the tip to the right past straight stream to shut off.
- Tip can be used independently of the ball shutoff to create a "Break-apart" nozzle (<u>NST</u> <u>MODEL ONLY</u>)

Maintenance:

- Test nozzle before putting into service.
- Clean nozzle by flushing with water after use.
- Use non-detergent soap to clean dirt from the exterior to reduce wear .
- Regularly check the bail handle screws that they are tight. If taken out use medium thread locker on the threads before reassembly.
- Periodically service your nozzle or have your fire equipment dealer service it.
- Normally serviced parts are the: Ball, Seat assembly, Spinning teeth, and the handle hardware (Ball locator screw, Actuator, Pan head cover).

