



**CROSSFIRE Series**

**STOW-A-WAY BASE 4.0\"BSPM**

**XPL-1BP**

SINGLE INLET 3500 LPM NO SAFETY VALVE

**\$2090.00 List Price**

**FEATURES**

WITHOUT SAFE-TAK VALVE is supplied with either two clappered swivel inlets or with a single full-time swivel inlet. Includes a safety tie-down strap with attached storage cap. STOW-A-WAY 800 portable base is not equipped with SAFE-TAK™ "Flow Safety Valve." Maximum recommended flow with Stow-A-Way Base in portable mode is 800 gpm (3500 l/min). Order XF500-KIT Option \$570.00 to add a flow safety valve. Weight of safety valve is 3.1 lb (1.4kg).

## SPECIFICATIONS

<b>Coupling Size Side A</b>	4" (100mm)
<b>Coupling Size Side B</b>	2.5" (65 mm)
<b>Coupling Style Side A</b>	Male Threads
<b>Finish</b>	International Red
<b>Horizontal Control</b>	N/A
<b>Horizontal Movementdegrees</b>	N/A
<b>Inlet</b>	4" BSP Male
<b>Max Flow</b>	800gpm (3,500 l/min)
<b>Operation Energy Source</b>	Manual
<b>Oscillation</b>	No
<b>Outlet</b>	Quick Connect Male
<b>Package</b>	No
<b>Safety Shutoff</b>	No
<b>Valve Design</b>	No Valve
<b>Vertical Control</b>	N/A
<b>Vertical Movementdegrees</b>	N/A
<b>Weight</b>	30.1
<b>Safety Inlet</b>	No

## DOCUMENTS

### Service Procedures

[CROSSFIRE XF500-KIT & XP500-KIT INSTALLATION INSTRUCTIONS \(PDF\)](#)  
[PARTS LIST: CROSSFIRE & SAFE-TAK 1250 \(PDF\)](#)  
[PARTS LIST: CROSSFIRE & SAFE-TAK 1250 \(PDF\)](#)

### Instructions For Installation, Safe Operation and Maintenance

[CROSSFIRE STORAGE BRACKET \(PDF\)](#)  
[CROSSFIRE® MONITOR MANUAL \(PDF\)](#)  
[MONITOR EXTENSION PIPE \(PDF\)](#)  
[Z FRENCH MANUEL : CANON À EAU CROSSFIRE®](#)  
[Z GERMAN CROSSFIRE® MONITOR MANUAL \(PDF\)](#)  
[Z ITALIAN CROSSFIRE® MONITOR MANUAL \(PDF\)](#)  
[Z POLISH CROSSFIRE® MONITOR MANUAL](#)  
[Z SPANISH MONITOR CROSSFIRE \(PDF\)](#)

### Product Order Forms

[CROSSFIRE COMBINATION PACKAGES ORDER FORM \(PDF\)](#)

### Online Videos

[CROSSFIRE CUP SEAL REPLACEMENT \(MP4\)](#)  
[CROSSFIRE SERIES VIDEO \(MP4\)](#)  
[HOW TO UPGRADE A STANDARD BLITZFIRE TO AN OSCILLATING BLITZFIRE \(MP4\)](#)

### Technical Specifications and Drawings

[MONITOR DRAWING AND PART LIST \(PDF\)](#)  
[PARTS LIST: CROSSFIRE BRACKET \(PDF\)](#)

### Technical Bulletins & Testing Reports

[CROSSFIRE® AND HURRICANE™ SHAFT SEAL CHANGE \(PDF\)](#)  
[PRODUCT BULLETIN 3" AND 4" MONITOR FLANGE CONNECTION CHANGE \(PDF\)](#)  
[PRODUCT BULLETIN PORTABLE MONITOR STORAGE BRACKET LABEL CHANGE \(PDF\)](#)

### Certifications & Approvals

[CROSSFIRE WITH STOW-A-WAY BASE EN15767-1 \(PDF\)](#)

## ABOUT THE CROSSFIRE SERIES

The CROSSFIRE monitor is a unique master stream appliance that's lightweight, compact and incredibly versatile. It can be connected to either a portable base or a truck.

With a flow rating of 1250 gpm in portable operation, the TFT Crossfire monitor integrates the exclusive Safe-Tak safety shutoff system to prevent unintentional movement. The monitor's compact and lightweight design includes stainless spring steel legs with carbide tips for maximum stability, and a visual attachment indicator for additional security.

Connect to a truck with the adapters or a TFT Extend-A-Gun with XL outlet. The connection is easy, positive, and visually verified. When in use, the release is "locked out" by water pressure. The waterway is a large 3.25" (83mm) which lets the CROSSFIRE deliver up to 1250 gpm (4500 l/min) with low friction loss.